




P300 Quick Start Guide


Package Contents	1
Appearances	2
Front	2
Top	3
Bottom	3
Back	4
Use for the First Time	5
Charging and Power Supply	5
Replacing Battery	6
Screen Alignment	8
Turn on Screen	8
Power On and Off	8
Sleep Mode	8
Reboot	9
Digital Camera Use 	9
Cell Phone Use	10
Turn the Phone On and Off	11

 In this guide, the sections marked with “” indicate that whether the features described here are supported or not depends on the actual product specifications.

Thank you very much for purchasing this product. This document mainly provides you with the references needed when you use this product for the first time. Meanwhile, hardware descriptions will also help you to get familiar with every basic function quickly.

Package Contents

Pocket PC, stylus, USB cradle, USB cable, AC adapter, headset, companion CD, leather case, and user manual.

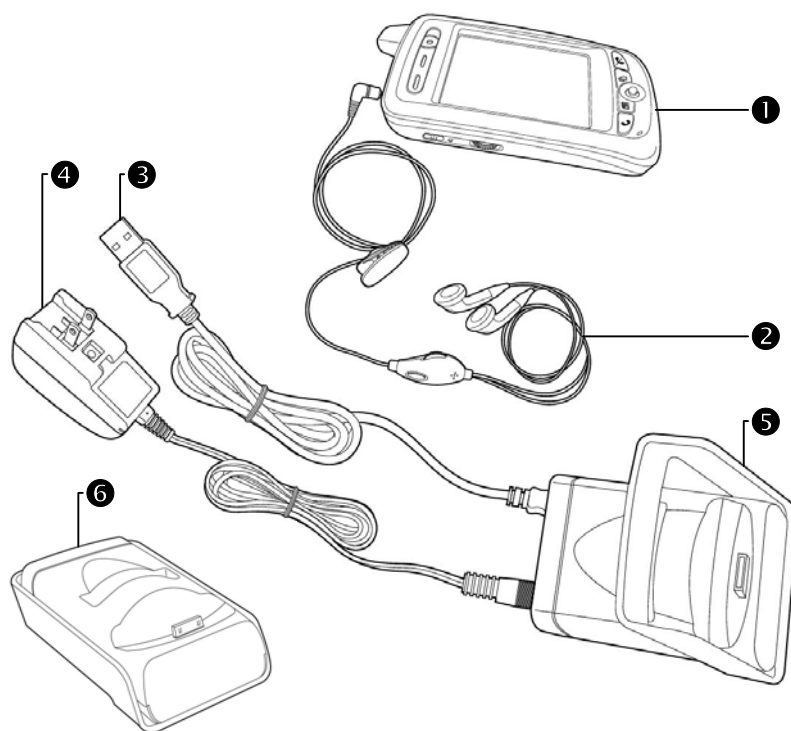




- ❶ Pocket PC ❷ Headset ❸ USB cable ❹ AC adapter
- ❺ USB cradle (supporting backboard installed)
- ❻ USB cradle (supporting backboard folded down)


▣ When this product was shipped, the charger's supporting backboard and cradle were packaged separately. After opening the package, please install backboard into the locking pawl on the cradle as shown in figure ❺. When Charger and USB cradle is not in use or when you need to carry it around, you can fold down the backboard as shown in figure ❻.

Appearances

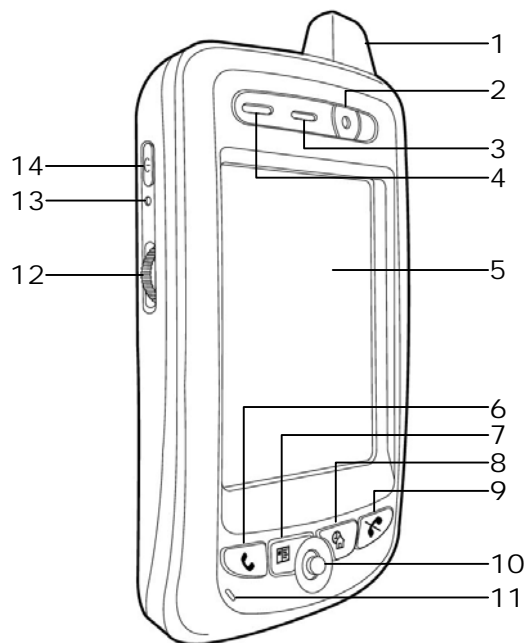Front



- 1 Antenna
- 2 Built-in Digital Camera Lens 
- 3 Speaker
- 4 Indicator
- 5 Touch Panel
- 6 Send Button
- 7 "Contact" Hot Key
- 8 "Today Screen" Hot Key
- 9 End Button
- 10 Joystick, controlling browsing direction.
Pressing down joystick directly will make it function as an "Action" key.
(such as camera shutter )
- 11 Microphone
- 12 Depending on the program that is running at the time, it can be used to adjust the volume or as a windows scrolling button.
- 13 Reset Button
- 14 Power Button

 Status icons on the navigation bar:


-  Cell Phone Off
-  Cell Phone On
-  GPRS is Online

Top

1 Headset Jack

2 Infrared Port


3 Stylus slot, pull to take out stylus.

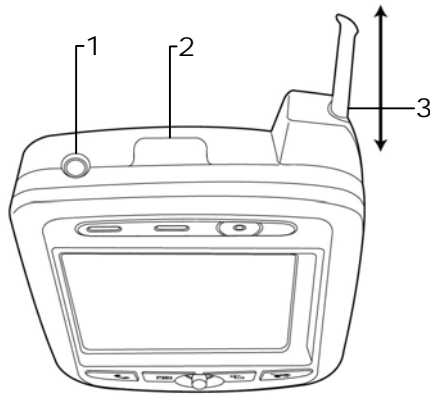

Bottom

1 Cradle connection port


2 SD/MMC card slot

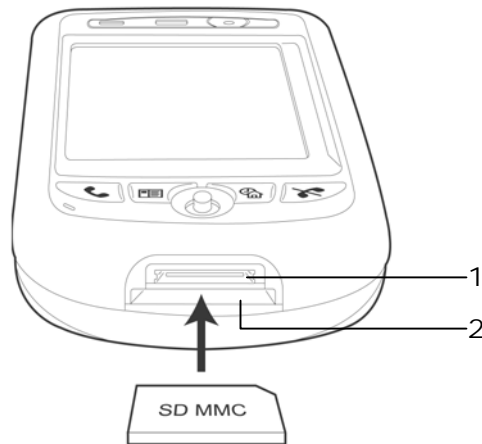

3

Back

- 1 Main battery lock, follow the illustrations on device to use.
- 2 Main battery. Merchandise label on the top of battery cover.
- 3 Back-up power switch, follow the illustrations on device to use.
- 4 SIM card slot, follow the illustrations indicated on device to use.
- 5 To remove SIM card: use one hand to press down locking pawl, use the other hand to push SIM card.

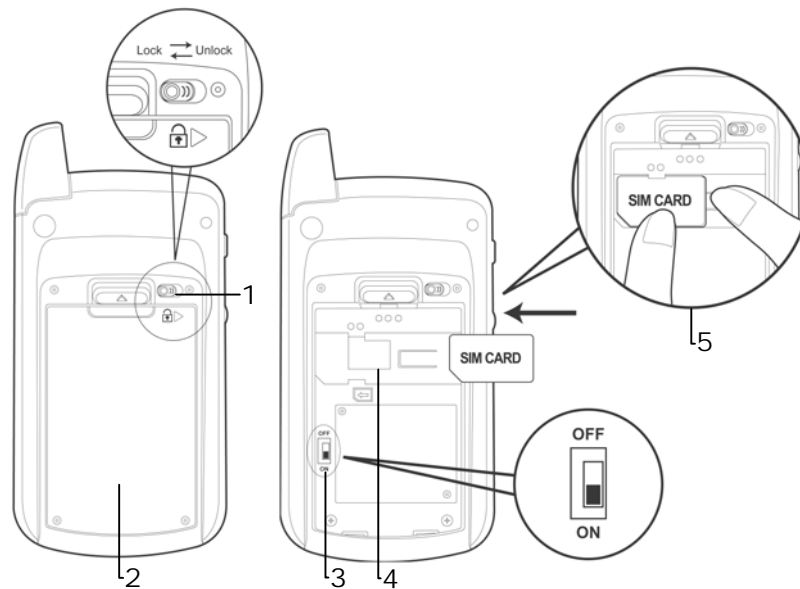


Please note carefully!

1. You need to turn on back-up power switch when you use this device the first time. When back-up power switch is set to “ON”, the system operation will temporarily rely on back-up battery to supply its power if you need to pull out or replace main battery. Back-up battery is charged by AC adapter or main battery.
2. If back-up power switch is set to “OFF”, the back-up battery will not function. Once the main battery is taken out, the device will only retain Microsoft Windows and manufacture’s pre-installed programs. Any other data input, programs newly installed, and customised settings setup by you will be lost.

Use for the First Time

Charging and Power Supply

- ❶ USB port: use the USB cable comes with this product to connect to the PC
- ❷ USB host port: can be used with common retail mice and USB thumb drives
- ❸ Power Jack

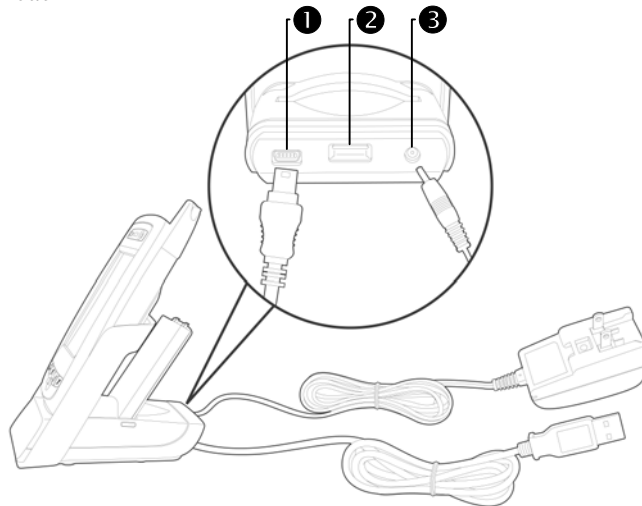

3. Unlock main battery lock and release the main battery. (If you just unpack the package, please omit this step. Main battery and Pocket PC are packed separately when the phone was shipped.)
4. Use stylus to set back-up power switch on the back of the device to be On. **We remind you that, you only need to turn on back-up power switch when you use this device for the first time. You will not need to touch this switch again in any other situation.**
5. Install the main battery and lock the main battery lock.
6. Plug the AC adapter's (specifically for this product) round connector into the power jack located in the back of the charging cradle. Then plug the other end of the AC adapter into a normal home-use wall outlet. The device will then start charging automatically.

7. **Cold Boot:** Press and hold the “Power” button on the left side of the device, meanwhile, use the tip of the stylus to press down the “Reset” button located on the left side of the device. Then follow the instructions on screen to finish screen alignment...etc. tasks.
8. A brand new Pocket PC takes approximately 8 hours to be fully charged. It takes about 3 hours to be charged in full thereafter. After charging is finished, you can then unplug the AC adapter and carry around the device freely. Please charge the device regularly in the future to keep the device functioning smoothly.
9. “Indicator on the top left of this device” will indicate charging or various other functions in-use.

Charging	Charging is Finished	Low Power
Red light glows	Red light off	Red light blinks
Cell phone on	Reminder or warning	
Green light blinks	Orange light blinks quickly	

- ▣ If secondary main battery is purchased, it can be charged by plugging in the charging slot located on the back of the charging cradle. “Indicator on the side of the charging cradle” will indicate the charging status.

Charging	Charging is Finished	No Battery
Red light glows	Green light glows	Indicator off


Replacing Battery

1. If cell phone or GPRS connecting function has been turned on, you should turn them off first before going on to the next step. Otherwise, the connection will be shut down improperly.
2. Unlock the main battery lock located on the back of this device and take out the battery.
3. Replace the main battery and lock the main battery lock. When the main battery is taken out, system power will be supplied temporarily by back-up

battery. However, if you do not install the main battery back within 30 minutes, data will be lost.

Screen Alignment

When you use this Pocket PC for the first time or cold-boot it, system will require you to do screen alignment. When the device doesn't respond properly to screen taps, you can also redo screen positioning by following the instructions in this section.

1. Tap on  and then **Settings**. On the **System** tab, tap **Screen** to align the screen.
2. Tap on the “Align Screen” button.
When the screen adjustment window appears, use stylus to tap the center of the cross (+) until the next cross appears. Please follow the instructions on screen to finish the rest of the operations. Tap “ok” button to exit.




Turn on Screen

This product is designed to provide you with power-save functions. When the screen is off, you can turn the screen back on by pressing the “Power” button on the left side of the device.

If backlight is desired, tap on , **Settings**, **System** tab, and then **Backlight**.


Power On and Off

Sleep Mode

1. Press the “Power” button on the left side of the device to enter Sleep mode. During the Sleep mode, screen is off and some peripherals will enter power-save mode. But if the cell phone is already turned on, it will remain on stand-by status.
 2. Press the “Power” button again to turn the screen back on.
- You can also tap on  and then **Settings**. On the **System** tab, tap **Power** to setup “automatically turn off the device” after being on stand-by for a period of time.

Reboot


- **Warm-boot (Reset):** Use the tip of the stylus to press down the “Reset” button located on the left side of the device.

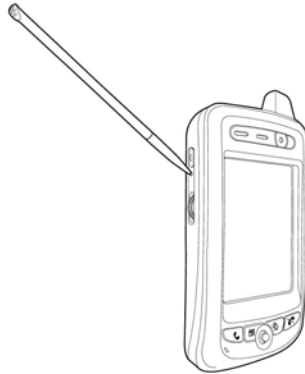


- **Cold-boot:** Press and hold the “Power” button on the left side of the device, meanwhile, use the tip of the stylus to press down “Reset” button, then follow the instructions on the screen to finish screen alignment...etc. tasks.





Digital Camera Use 📷


1. Tap on , **Programs**, and then **Digital Camera**.
2. Tap on “Preview” button on the screen. If you want to take a picture of yourself, face the Pocket PC screen. When you are satisfied with the image on the screen, press down the camera shutter. I.e. “Action” key located on the lower side of the Pocket PC (the center button of joystick).
3. You can send pictures to other people as an email attachment.

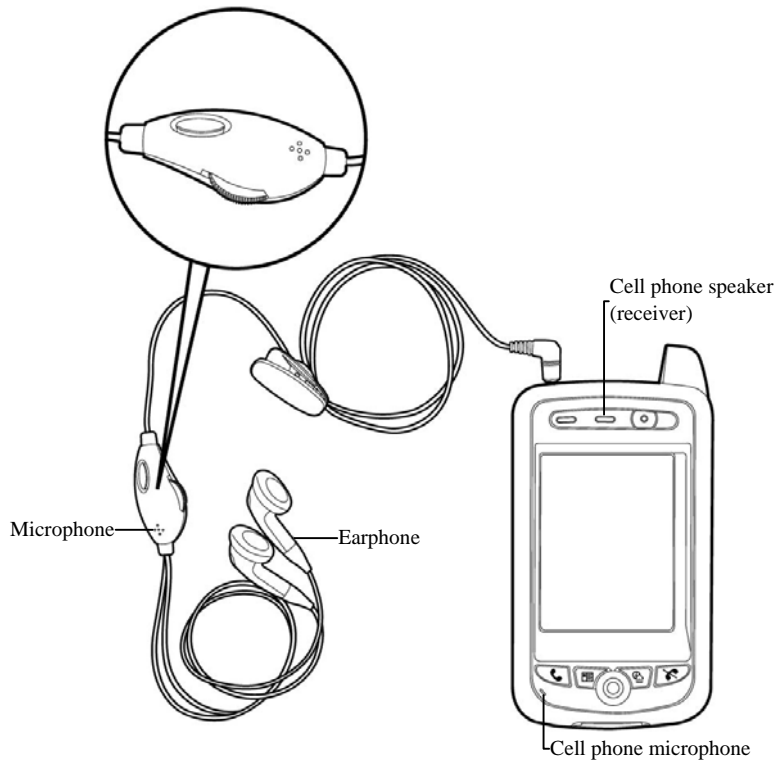
 
 
 



Cell Phone Use



Methods of Use	Operation	Receive a Call or Hang-Up	Adjusting earphone volume
Hold the Pocket PC to talk.	Put your ear near the speaker (receiver) and mouth near the microphone of Pocket PC.	Press the  button to answer a call or  button to hang-up.	During a call, use the volume adjustment button on the left side to adjust speaker volume.
Plug-in external headset.	Place the earphone piece into the ear and microphone piece near the mouth.	Using the remote function, press the button on the earphone and microphone headset to receive a call or hang-up.	During a call, use the volume adjustment button on the headset to adjust the volume of the earphone.

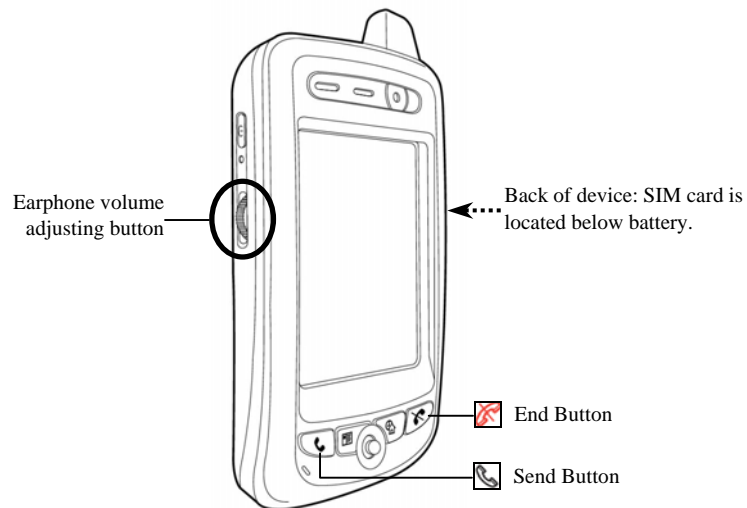Turn the Phone On and Off



1. Unlock main battery lock and take out the main battery.
2. **Install SIM card:** follow the illustration shown on the device to install cell phone SIM card into its slot. Please note the positioning angle of SIM card. The metal side should face the device.
3. **Turning on cell phone:** Tap on  icon located in the navigation bar on the top, wait until message window appears, then tap “Turn on phone” button and wait for the turn-on procedure to finish. Icon  will become .
4. If password (PIN) is set, key in the password and then tap “Talk” button.
5. **Make a call:** Press  “Dial” button on the device’s bottom left corner to enter the phone screen. Using the stylus to select the phone number, tap the “Talk” button.
6. **Answer a call:** Press  “Talk” button on the bottom left corner.
7. **End a call (hang-up):** Press  “Hang-up” button on the bottom right corner.
8. **Turn off cell phone:** Tap on  icon, and then tap “Turn off phone” button after message window appears.

